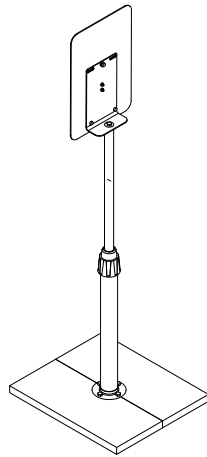


CAUTION

1. Please note that this stand is not a toy, child should avoid unnecessary contact, it may roll over and result in injury. Kindly use it appropriately.
2. Avoid installing in open areas which may result in accelerated weathering or rusting.
3. This Stand should not be in contact with any electrical device or wire network.
4. This stand comes with all engineering and general checkups.
5. Don't hit the surfaces to prevent damage to the stand.



Designed & Manufactured By:



4S Synergies Pvt. Ltd.

Plot No.-52, Sec.-53, Phase-V, HSIIDC Ind. Estate, Kundli, Sonapat,
Haryana-131028(INDIA)

www.higenie.jsg.asia
higeniesales@jsg.asia

Customer Care :+91-9090603090

Available from Monday to Saturday between 10.00 am to 5.00 pm.(IST)

For Video :



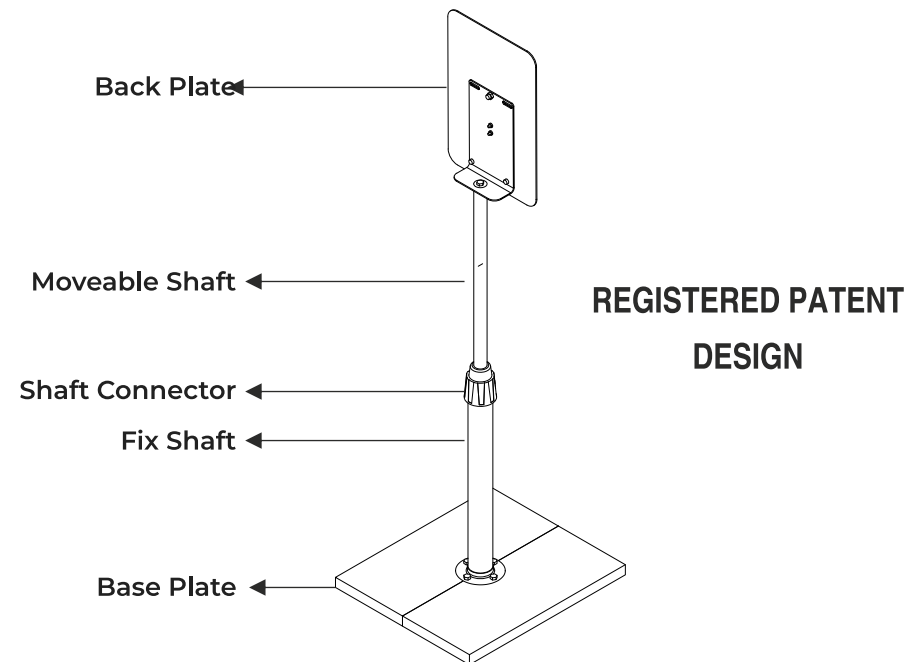
For Website :



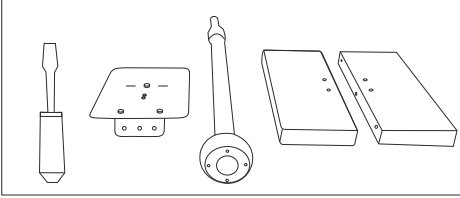
INSTALLATION INSTRUCTIONS

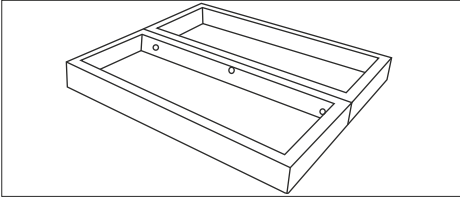
AUTOMATIC DISPENSER STAND

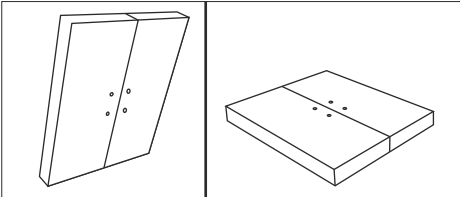
An innovative Engineering Design for easy and safe application of hand sanitizer/soap on hands without contamination or unnecessary touch.

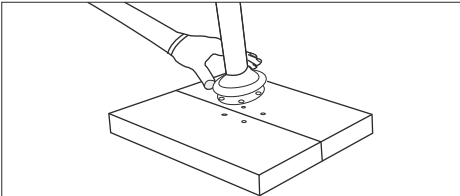


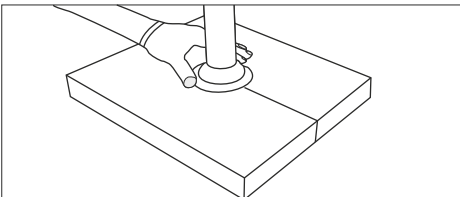
Note:- Please read instructions carefully before use

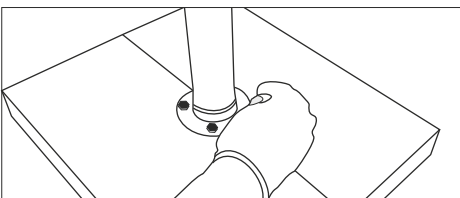
- 1)  Before fitment, Please ensure child parts given below:-
(a) Screwdriver (b) Base Plate (c) Fix Shaft (d) Flange (e) holding Plate (f) Moveable Shaft (g) Screw.

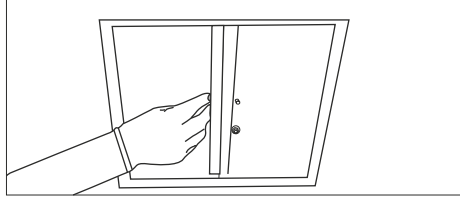
- 2)  Put the base plate & joint by tight the screw with the help of screwdriver.

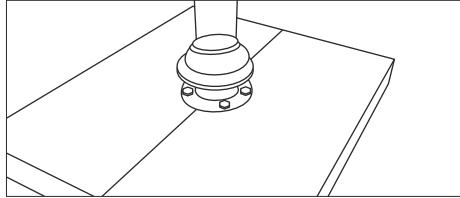
- 3)  After that turn over the base plate.

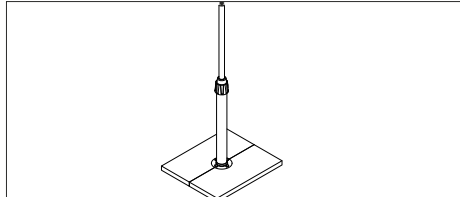
- 4)  Now fix the flange with fix shaft over the base plate.

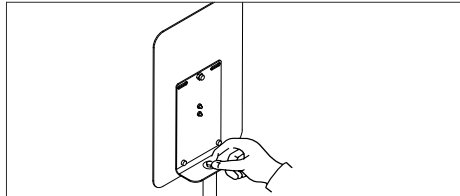
- 5)  Pull the flange upside.

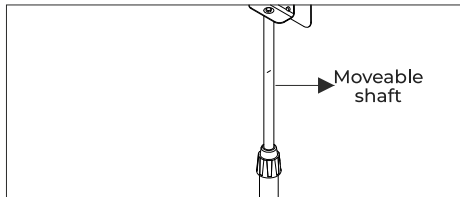
- 6)  Fix the screw in hole.

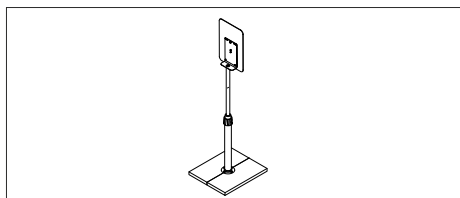
- 7)  Now turn over the base plate & tight the screw with nut.

- 8)  Now put the flange on screw.

- 9)  After that it will look like this.

- 10)  Now fix the back plate on move-able shaft with the help of screw.

- 11)  Now we can adjust by moveable shaft as per requirement.

- 12)  Now, fitment is complete.