



Swift

Touchless Dispenser

One Machine Solution

For Viruses



Escherichia Coli



Candida Albicans



Influenza Virus



Norovirus



Corona Virus



Convenient hand-
washing and
sterilization



IR Detection

Certified:



IATF 16949

FDA **FCC**




ISO 13485: 2016



Design Regd.

www.higenie.jsjg.asia

Product Parameters

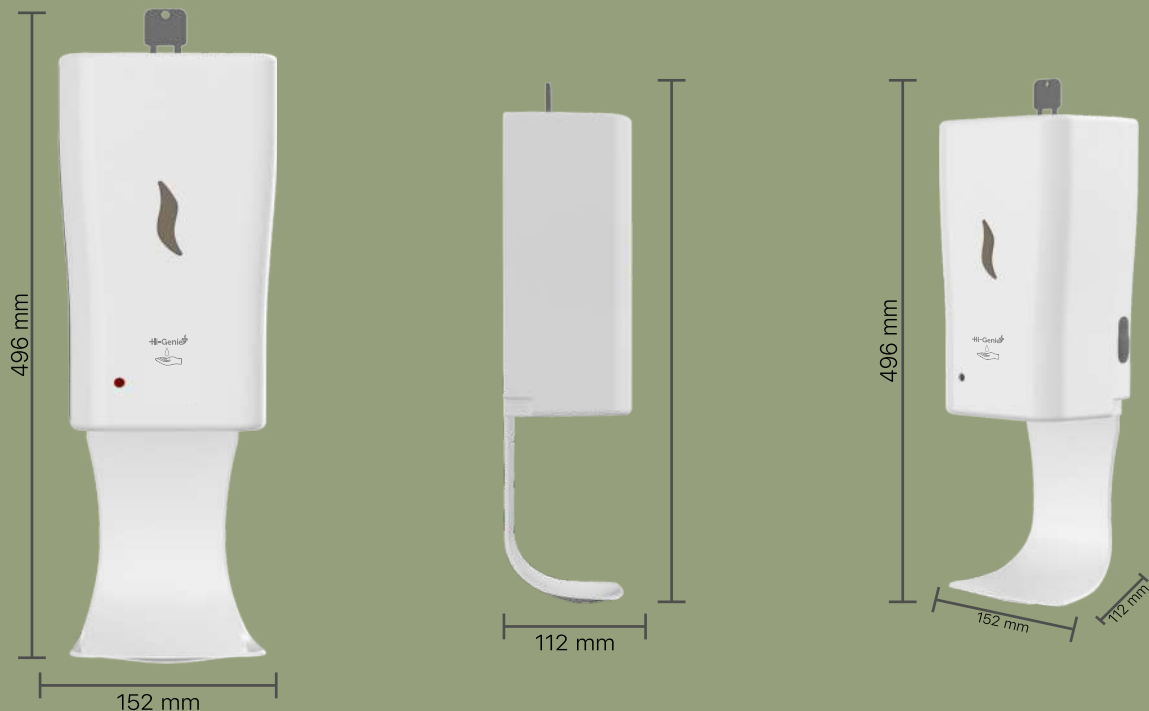

Product name : SWIFT
Product model : HG-004
Power supply : DC adaptor 6V/1A / 4*1.5V R14 size AA
Color : White/Customised
Capacity : 1000ml
Material : ABS/PDM/HDPE
Sensing distance : 0-10cm
Package Size : 153.5mm*125mm*342.5mm

Say goodbye to traditional compressions. Discover our advantages:



Low Maintenance
& Running Cost



Built-in
Infrared Sensor



Anti Theft
Design



No Infection



Eco Energy



Auto Sensor



Larger Capacity
(1000 ml)



Communal Safety



User-friendly



Liquid



Spray

Installation methods: Wall Mounted & Floor Stand



Wall mounted

Multiple choice
Joker style




Floor standy with plastic drip-tray

Product Patent

Saves space
Sturdy and durable

Perfect for all types of living space | Touchless for better safety | Prevents germs from spreading

Swift Details

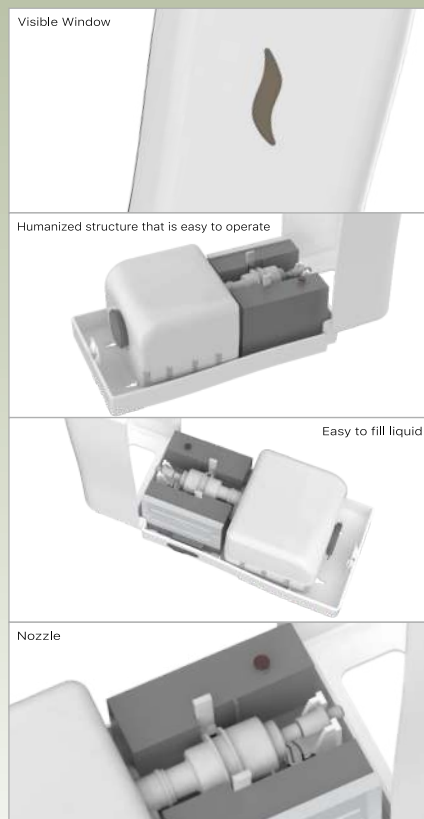


Visible Window

Humanized structure that is easy to operate

Easy to fill liquid

Nozzle

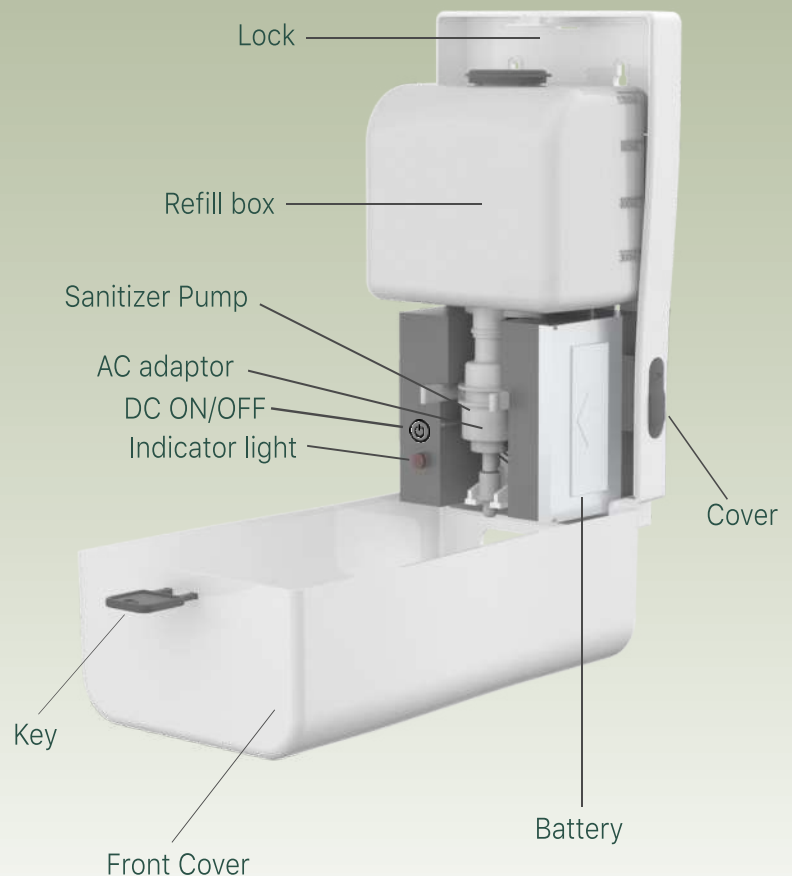

Lock

Refill box

Sanitizer Pump

AC adaptor

DC ON/OFF

Indicator light

Cover

Battery

Key

Front Cover



Please choose a proper place to install this dispenser and keep atleast 40cm free space below the device.

- Unlock and open the front cover, take out the container box.
- Make the drilling marks, drill the holes and insert the plastic plugs.
- Fixate the dispenser onto the wall with screws.



Suitable for multiple scenarios



Restaurants



Cinema Halls



Schools & Colleges



Banks



Shopping Mall



Hospitals



Airports



Railway Stations



Public Toilets



Petrol Pumps



Offices



Public Places

Designed & Manufactured By:



4S Synergies Pvt. Ltd.

Plot No.-52, Sec.-53, Phase-V, HSIIDC Ind. Estate, Kundli, Sonapat, Haryana-131028(INDIA)

www.higenie.jsg.asia

higeniesales@jsg.asia

Customer Care :+91-9090603090

Available from Monday to Saturday between 10.00 am to 5.00 pm.(IST)

